



Stairs with guardrail

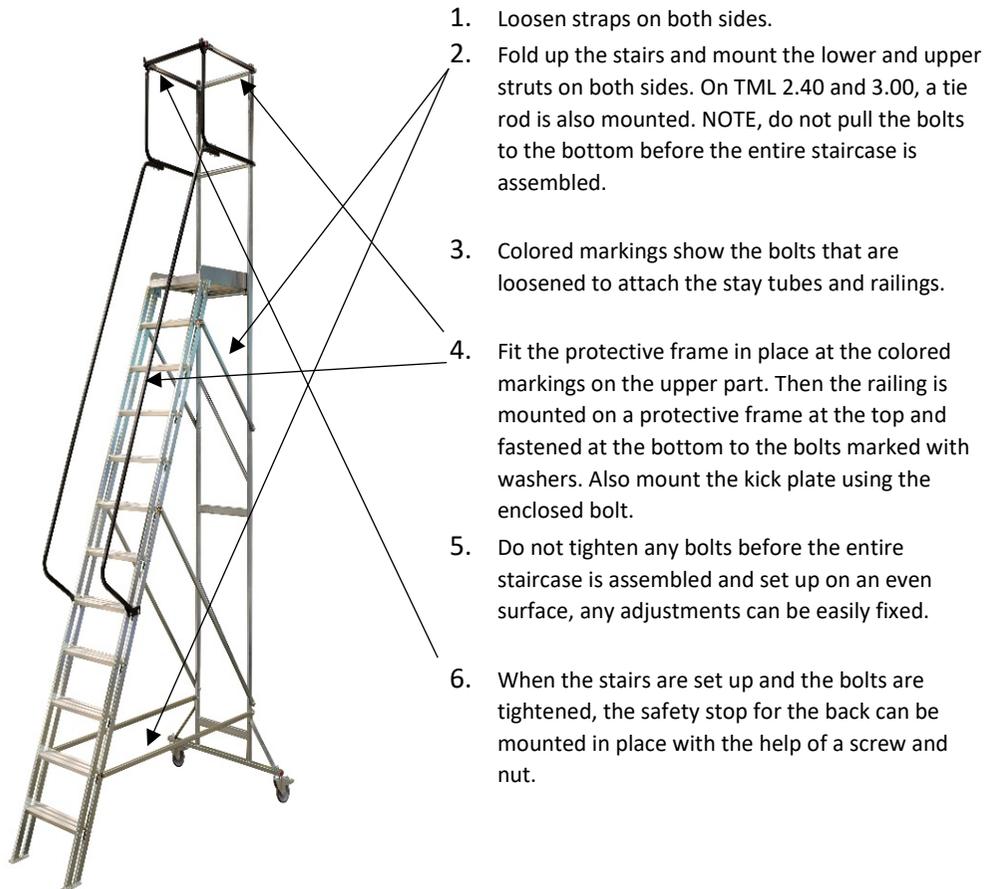

1. Loosen straps on both sides.
2. Fold up the stairs and mount the lower and upper struts on both sides. On TML 2.40 and 3.00, a tie rod is also mounted. NOTE, do not pull the bolts to the bottom before the entire staircase is assembled.
3. Colored markings show the bolts that are loosened to attach the stay tubes and railings.
4. Fit the protective frame in place at the colored markings on the upper part. Then the railing is mounted on a protective frame at the top and fastened at the bottom to the bolts marked with washers. Also mount the kick plate using the enclosed bolt.
5. Do not tighten any bolts before the entire staircase is assembled and set up on an even surface, any adjustments can be easily fixed.
6. When the stairs are set up and the bolts are tightened, the safety stop for the back can be mounted in place with the help of a screw and nut.

Stairs with guardrail

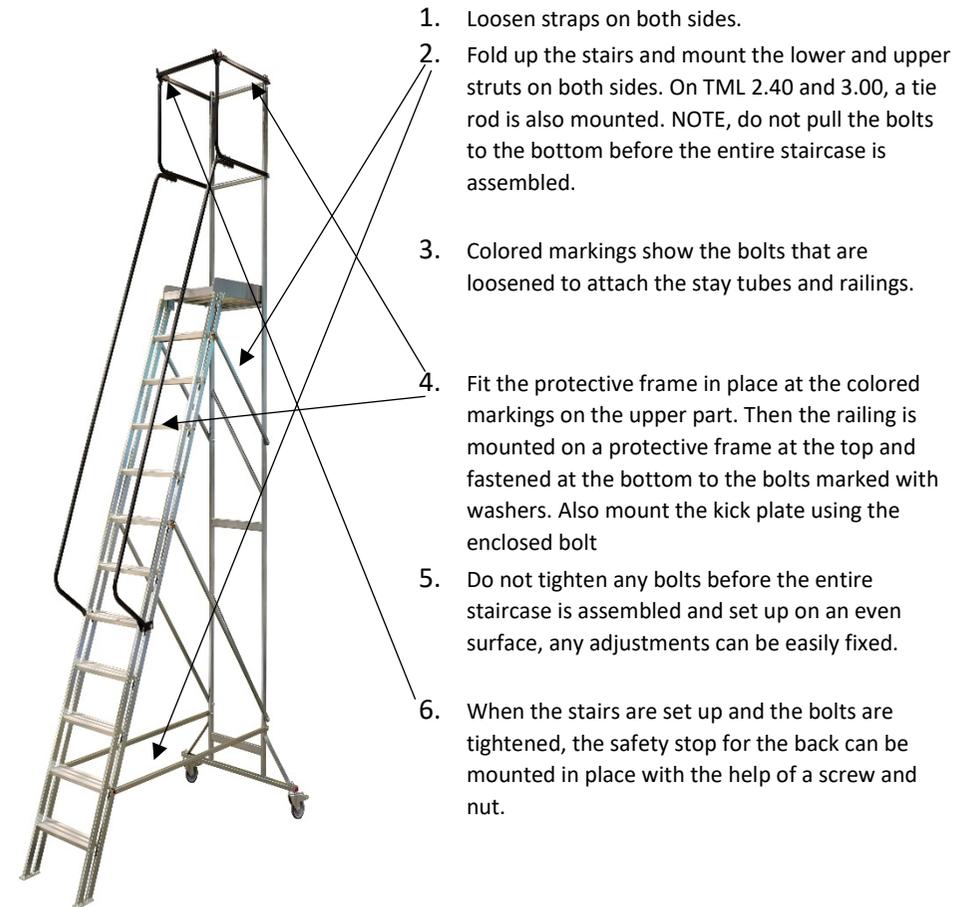

1. Loosen straps on both sides.
2. Fold up the stairs and mount the lower and upper struts on both sides. On TML 2.40 and 3.00, a tie rod is also mounted. NOTE, do not pull the bolts to the bottom before the entire staircase is assembled.
3. Colored markings show the bolts that are loosened to attach the stay tubes and railings.
4. Fit the protective frame in place at the colored markings on the upper part. Then the railing is mounted on a protective frame at the top and fastened at the bottom to the bolts marked with washers. Also mount the kick plate using the enclosed bolt
5. Do not tighten any bolts before the entire staircase is assembled and set up on an even surface, any adjustments can be easily fixed.
6. When the stairs are set up and the bolts are tightened, the safety stop for the back can be mounted in place with the help of a screw and nut.