












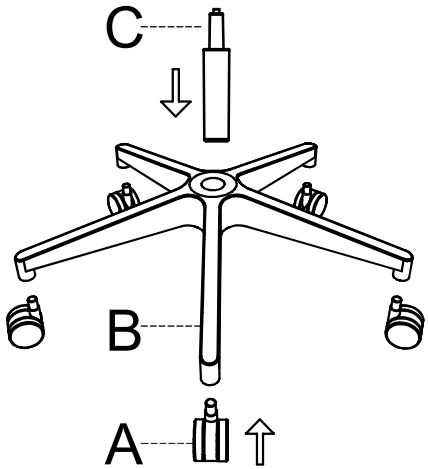


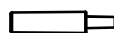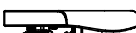
Part	Picture	Qty.	Spare
A		5	
B		1	
C		1	
D		1	
E		1	
F		3	1
G		3	1
H		1	
I		2	
J		2	
K		2	
L		1	
M			1


**1**




**2**

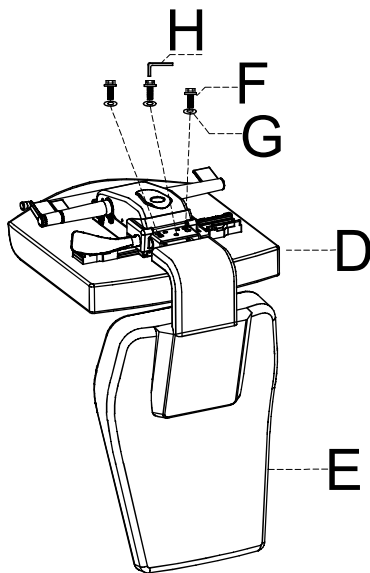


**3**

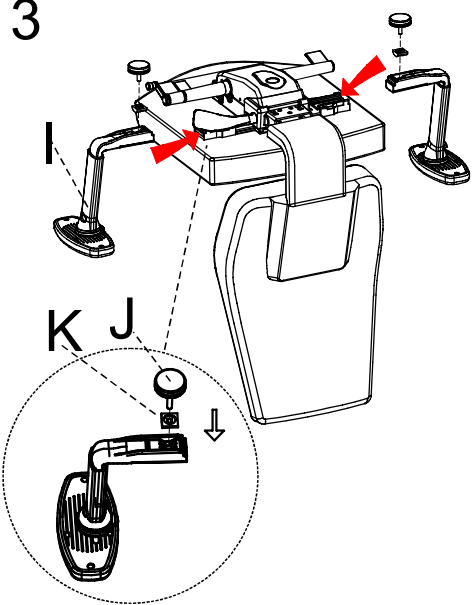

**4**

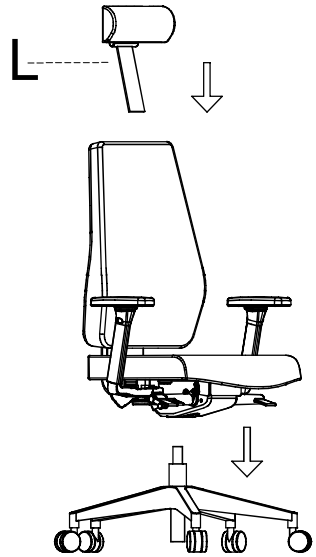

**5**

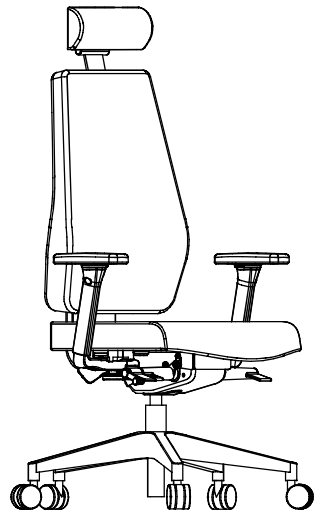

### Headrest adjustment (①):

To rise: Hold the headrest with both hands and lift it up to a suitable height.

To lower: Hold the headrest with both hands and pull it down to a suitable height.

To adjust the headrest angle: Hold the headrest with both hands and turn it to a suitable angle.

### Back height adjustment (②):

To rise: Hold the bottom of the chair back with both hands and lift it up to a suitable height step by step.

To lower: Hold the bottom of the chair back with both hands and lift it step by step. After crossing the highest position, the back can be lowered to the lowest position.

Attention: Backrest can NOT lower down during the adjustment to upward; Only can lower down to lowest position when reaching the highest position and release your hands.

### Armrest adjustment (③):

Armrest height: Press the button while holding the armrest and lift it up or lower it down.

Armpad forward/backward: Grasp the armpad and slide forward or backward.


Armpad angle: Grasp the armpad and press the button under the armpad, pivot to the left or right. (This armtop available to pivot 360 degree)

Armrest width: Turn anticlockwise the knob to unlock, grasp the armrest to pull out or push in, turn clockwise the knob to lock when reaching proper position.

### Seat height adjustment (④):

To raise: Pull up the lever when leaving or half up, release the lever when reaching a desired height.

To lower: While sit, pull the lever up, release the lever when reaching a desired height.

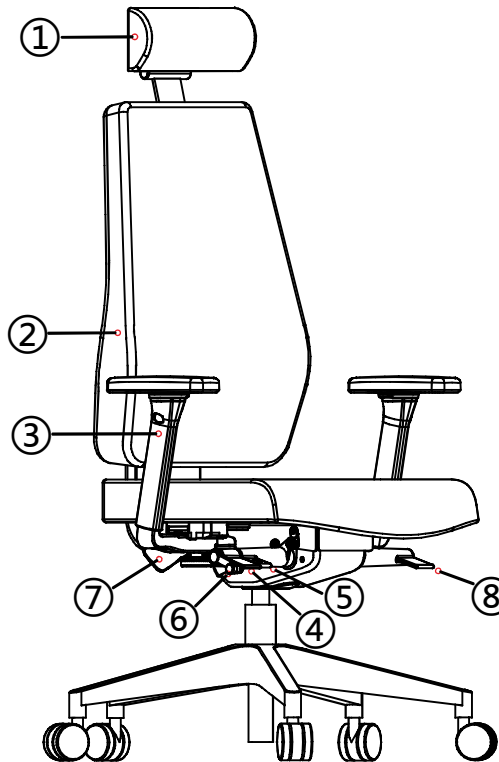

### Seat depth adjustment (⑤):

To increase: While sit and press down the lever, at the same time, push your hips forward to slide the seat cushion to a proper position, and then release the lever.

To reduce: When leaving or half up, press down the lever, and the seat cushion can return to the rear position, or release the lever when it reaches the desired position.

### Tilt tension adjustment (⑥):

To increase: Turn the lever clockwise/forward to stronger.

To reduce: Turn the lever anticlockwise/backward to weaker.

### Seat angle adjustment/ Forward Tilt (⑦):

To adjust the forward tilt (working posture): Turn clockwise the handle, the rear part of the seat will be lifted up, while reaching the highest point, the seat angle can be locked.

To return: Turn anticlockwise the handle, the rear part of the seat will lower down automatically, while reaching the original position, the seat angle can be locked.

Tips: When the handle turn clockwise and angle adjustment is open, at unlock status, seat angle can be a free-float posture, please decide which position to use as your needs.

### Tilt angle adjustment (Tilt/Swing Lock) (⑧):

To unlock: Flip up the adjustment lever.

To lock: Flip down the adjustment lever when reaching a desired angle.

Attention: Mechanism with safety lock, after unlock operation, the back will not return immediately, need to recline and then can be fully unlock.